


VT No. 49-0002**Kit Contents**

This kit contains a left side, right side and center accent trim piece.

INSTALLATION

1. Unscrew the antennas from the tour-pak light assembly.
2. Clean the surface of the light assembly bezel with an equal mixture of water and isopropyl alcohol. Allow to dry thoroughly.
3. Obtain the trim pieces from the kit. Do not remove the adhesive tape backing at this time.
4. Position the center trim first; approximately centering it on the light bezel.
5. With the help of an assistant, position the left and right trim pieces.
6. Apply a piece of masking tape to the surface of the center trim.
7. Apply another piece of tape on the tour-pak lip directly adjacent to the first piece.
8. Slide the center trim left or right until it appears centered between the left and right trim.
9. Place a line across both pieces of masking tape to serve as an alignment reference mark.
10. Remove all of the trim pieces.
11. Remove the adhesive backing from the center trim and install it on the vehicle by aligning the reference marks.
12. Provide sliding pressure across the entire surface of the part to create a good bond.
13. Remove the adhesive tape backing from the left trim and install it to the vehicle.
14. Provide sliding pressure across the entire surface of the part to create a good bond.
15. Repeat for the right trim.
16. Install antennas

Note: Allow adhesive to set for 24 hours.

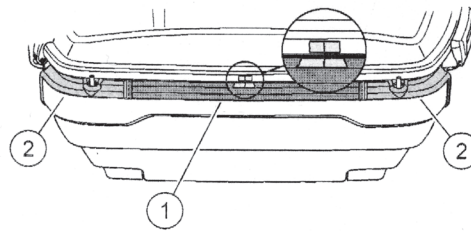

1. Center Accent Trim (1).
2. Side Accent Trim (2).

Figure 1. Install Accent Trim