

VT No. 50-0959 TRIM RAIL KIT

General

This kit is designed for use on all FL models equipped with fiberglass saddlebags.

This kit contains the following parts:

| QTY | DESCRIPTION |
|-----|--------------------------|
| 6 | Bolt, 1/4 - 20 x 3/4 in. |
| 6 | Washer, 1/4 in. flat |
| 6 | Lockwasher, 1/4 in. |
| 6 | Washer, rubber |
| 6 | Pad, rail mounting |
| 1 | Trim rail, left |
| 1 | Trim rail, right |

Installation


NOTE

See illustration. The position of the trim rail is critical. If the trim rail is mounted too far forward, it will interfere with the passenger grab rail when the saddlebag lid is removed.

⚠ CAUTION

Before marking and drilling holes, protect paint on saddlebag cover by applying masking tape over the hole locations.

1. See Illustration. Position the front of the trim rail approximately 1 to 2 inches from the front of the saddlebag lid. Hold the trim rail in place and remove the saddlebag lid to be sure the trim rail will not interfere with the passenger grab rail when the saddlebag lid is removed. When you are sure the trim rail is in the proper location, mark the three mounting points with a grease pencil.
2. Drill three 17/64 in. holes at locations determined in Step 1.
3. Place mounting pads on each leg of trim rail so leg seats in pad. Set rail on saddlebag cover.
4. Place the following washers on the three 1/4 - 20 x 3/4 in. bolt in the order given: first the lockwasher, next the flat washer, then the rubber washer. Attach rail to outside of saddlebag cover with these three bolts. Do not use Loctite and do not over-tighten.
5. Repeat procedure for second saddlebag cover.

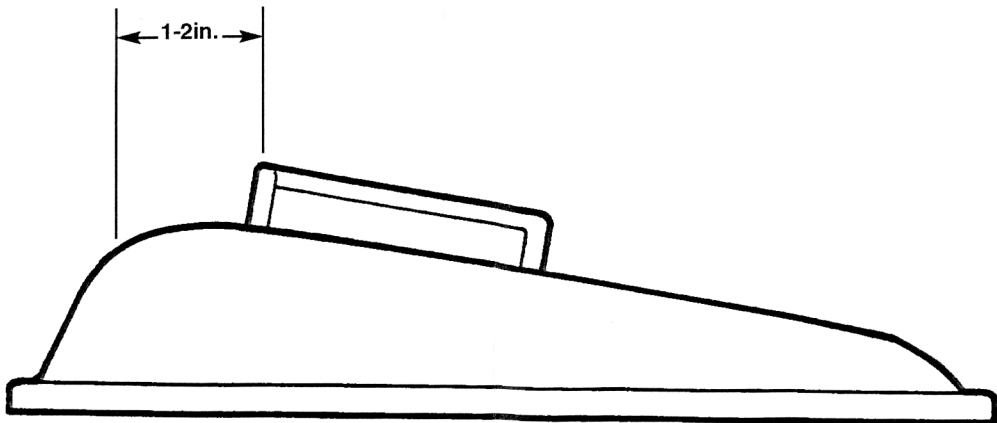

Trim Rail Location