

VT No. 50-0588 Bolt on Luggage Rack Instruction

This kit is designed to be installed only with sissy bar uprights and rigid or detachable sideplates.

Separate purchase of LOCTITE® 271 Threadlocker and Sealant
- Red is required for proper installation of this kit.

Kit Contents

Table 1. Contents

Description (Quantity)
Luggage rack
Screw, button head (4)

INSTALLATION

1. See Figure 1. If the sissy bar and sideplates have been previously installed, remove the four button head Torx screws attaching the sissy bar (5) to the sideplates (4). Discard the screws.
2. Remove the sissy bar and set it aside.
For Softail Models with Rigid-Mount Sideplates only:
Loosen, but do not remove, the hardware securing the sideplates to the motorcycle.
3. Position the luggage rack between the sideplates. Re-install the sissy bar into the sideplate channels.
4. Apply LOCTITE 271 to the button head screws (2) from the kit, and insert through the holes in the luggage rack (1), sideplate and sissy bar. Tighten the screws to 96-120 in-lbs (10.8-13.6 Nm).
5. **For Softail Models with Rigid-Mount Sideplates only:**
Apply LOCTITE 271 to the screws securing the sideplates to the motorcycle, and tighten to 21-27 ft-lbs (28.5-36.6 Nm).

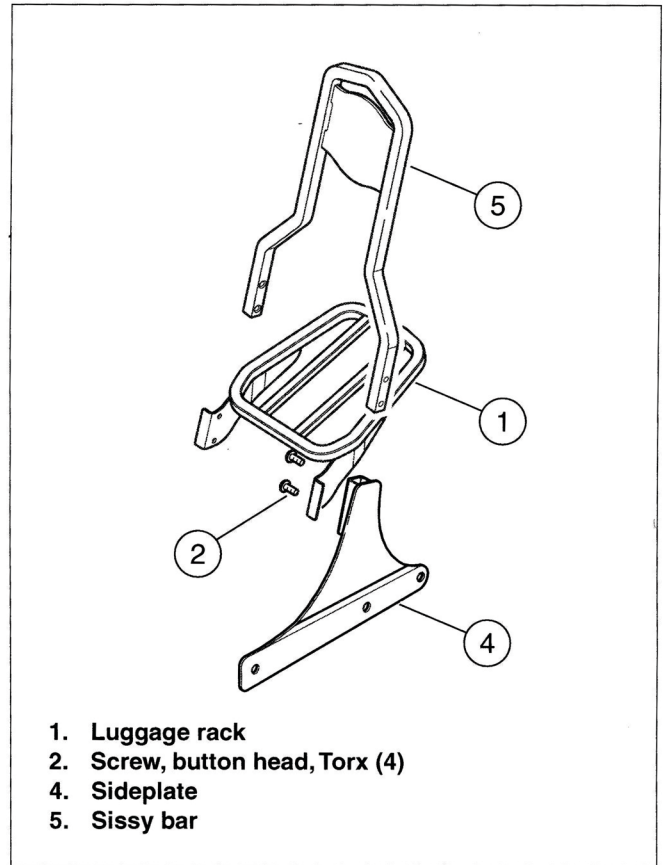


Figure 1. Luggage Rack Installation